

User's Manual

用户手册

DuraVision™

FDX1001

FDV1001

Color LCD Monitor
彩色液晶显示器

Important

Please read this User's Manual carefully to familiarize yourself with safe and effective usage.

Please retain this manual for future reference.

重要

请仔细阅读用户手册，熟练掌握其安全和有效的操作程序。

请妥善保管此手册，供日后参考。



For U.S.A. , Canada, etc. (rated 100-120 Vac) Only

FCC Declaration of Conformity

We, the Responsible Party

EIZO NANAOTECHNOLOGIES INC.

5710 Warland Drive, Cypress, CA 90630

Phone: (562) 431-5011

declare that the product

Trade name: EIZO

Model: DuraVision FDX1001/FDV1001

is in conformity with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canadian Notice

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

User's Manual

DuraVision™









FDX1001

FDV1001

Color LCD Monitor

SAFETY SYMBOLS

This manual and this product use the safety symbols below. They denote critical information. Please read them carefully.

| | |
|---|---|
|  WARNING Failure to abide by the information in a WARNING may result in serious injury and can be life threatening. | |
|  CAUTION Failure to abide by the information in a CAUTION may result in moderate injury and/or property or product damage. | |
|  | Indicates an attention to be required. For example, the symbol  illustrates the hazard type such as “the risk of electric shock”. |
|  | Indicates a prohibited action. For example, the symbol  illustrates a particular prohibited action such as “Do not disassemble”. |
|  | Indicates a mandatory action that must be followed. For example, the symbol  illustrates the notification of general prohibition such as “Grounding the unit”. |

Using the special functions, such as screen size change (ex. changing the horizontal and vertical ratio of images input) for commercial purposes or for the purpose of showing in public may violate copyright laws.

Product specification may vary with sales areas.

Confirm the specification in the manual written in language of the region of purchase.

Copyright© 2009-2010 EIZO NANA CORPORATION All rights reserved.

No part of this manual may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, or otherwise, without the prior written permission of EIZO NANA CORPORATION.

EIZO NANA CORPORATION is under no obligation to hold any submitted material or information confidential unless prior arrangements are made pursuant to EIZO NANA CORPORATION's receipt of said information.

Although every effort has been made to ensure that this manual provides up-to-date information, please note that EIZO monitor specifications are subject to change without notice.

Apple and Macintosh are registered trademarks of Apple Inc.

VGA is a registered trademark of International Business Machines Corporation.

Windows and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries.

VESA is a registered trademark or a trademark of Video Electronics Standards Association in the United States and other countries.

PC-9801 and PC-9821 are trademarks of NEC Corporation.

EIZO and EIZO Logo are registered trademarks of EIZO NANA CORPORATION in Japan and other countries.

DuraVision is a trademark of EIZO NANA CORPORATION.


All other trademarks are the properties of their respective owners.

⚠ PRECAUTIONS

IMPORTANT

- To ensure personal safety and proper maintenance, please read this section and the caution statements on the unit (refer to the figure below).

【Location of Caution Statement】

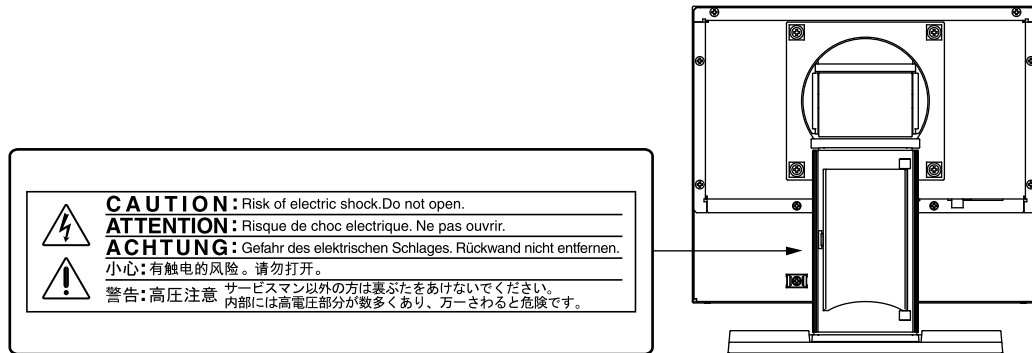

⚠ WARNING

If the unit begins to emit smoke, smells like something is burning, or makes strange noises, disconnect all power connections immediately and contact your dealer for advice.

Attempting to use a malfunctioning unit may result in fire, electric shock, or equipment damage.

Do not open the cabinet or modify the unit.

Opening the cabinet or modifying the unit may result in fire, electric shock, or burn.



Refer all servicing to qualified service personnel.

Do not attempt to service this product yourself as opening or removing covers may result in fire, electric shock, or equipment damage.

Keep small objects or liquids away from the unit.

Small objects accidentally falling through the ventilation slots into the cabinet or spillage into the cabinet may result in fire, electric shock, or equipment damage. If an object or liquid falls/spills into the cabinet, unplug the unit immediately. Have the unit checked by a qualified service engineer before using it again.



Place the unit at the strong and stable place.

A unit placed on an inadequate surface may fall and result in injury or equipment damage. If the unit falls, disconnect the power immediately and ask your dealer for advice. Do not continue using a damaged unit. Using a damaged unit may result in fire or electric shock.

WARNING

Use the unit in an appropriate location.

Not doing so may result in fire, electric shock, or equipment damage.

- Do not place outdoors.
- Do not place in a transportation system (ship, aircraft, train, automobile, etc.) where it may be affected by strong vibration or shock.
- Do not place in a dusty or humid environment.
- Do not place in a location where water is splashed on the screen (bathroom, kitchen, etc.).
- Do not place in a location where the steam comes directly on the screen.
- Do not place near heat generating devices or a humidifier
- Do not place in an inflammable gas environment.



To avoid danger of suffocation, keep the plastic packing bags away from babies and children.

Use the enclosed AC adapter.

The enclosed AC adapter is for use with this product only. Do not use the AC adapter with other equipment. Connecting to power sources that do not match the power ratings of the AC adapter may result in fire or electric shock.

Make sure the power cord meets the following requirements.

This product does not include a power cord. Please provide separately a power cord which meets the requirements. (For more information, please contact your dealer.)

- The power cord is compatible with the standards of the country and region in which this product is to be used.
- The power cord has a rated value of at least 2.5A.

Power supply: 100-240Vac 50/60Hz

To disconnect the power cord, grasp the plug firmly and pull.

Tugging on the cord may damage and result in fire or electric shock.



Use the correct voltage.

- The unit is designed for use with a specific voltage only. Connection to another voltage than specified in this User's Manual may cause fire, electric shock, or equipment damage.

Power supply: 100-240Vac 50/60Hz

- Do not overload your power circuit, as this may result in fire or electric shock.
-

Handle the power cord and AC adapter with care.

Do not place heavy objects on, pull or tie the power cord or the AC adapter. Use of a damaged cord or AC adapter may result in fire or electric shock.



Never touch the plug, AC adapter or power cord during a thunderstorm.

Touching them may result in electric shock.



When attaching an arm stand, please refer to the user's manual of the arm stand and install the unit securely.

Not doing so may cause the unit to become unattached, which may result in injury or equipment damage. When the unit is dropped, please ask your dealer for advice. Do not continue using a damaged unit. Using a damaged unit may result in fire or electric shock. When reattaching the tilt stand, please use the same screws and tighten them securely.

WARNING

Do not touch a damaged LCD panel directly with bare hands.

The liquid crystal that may leak from the panel is poisonous if it enters the eyes or mouth. If any part of the skin or body comes in direct contact with the panel, please wash thoroughly. If some physical symptoms result, please consult your doctor.



CAUTION

Handle with care when carrying the unit.

Disconnect the power cord and cables when moving the unit. Moving the unit with the cord attached is dangerous. It may result in injury.

When handling the unit, grip the bottom of the unit firmly with both hands ensuring the panel faces outward before lifting.

Dropping the unit may result in injury or equipment damage.



OK

Do not install the unit in a closed space.

If the interior becomes hot, it may result in fire, electric shock or damage.



Do not touch the power plug or AC adapter with wet hands.

Doing so may result in electrical shock.



Use an easily accessible power outlet.

This will ensure that you can disconnect the power quickly in case of a problem.

Mind that the AC adapter becomes hot during use.

- Do not cover or place anything on top of the AC adapter. Do not place the AC adapter on top of things that trap heat such as carpets, blankets, etc. Keep the AC adapter away from direct sunlight and heat sources such as heaters.
Not doing so may result in fire.
- Do not touch with bare hands. Doing so may result in burns.

Do not suspend the AC adapter in midair.

Using it while suspended in midair may result in fire or electric shock.



Periodically clean the area around the plug.

Dust, water, or oil on the plug may result in fire.

Unplug the unit before cleaning it.

Cleaning the unit while it is plugged into a power outlet may result in electric shock.

If you plan to leave the unit unused for an extended period, disconnect the power cord from the wall socket after turning off the power for safety and power conservation.

Notice for this monitor

Aside from displaying microscope images, this product is also suited to the dedicated usages such as operation of terminal equipment.

This product has been adjusted specifically for use in the region to which it was originally shipped. If the product is used outside the region, it may not operate as specified in the specifications.

This product may not be covered by warranty for uses other than those described in this manual.

The specifications specified in this manual are only applicable to signal cables specified by US.

Use optional products manufactured or specified by us with this product.

As it takes about 30 minutes for the performance of electrical parts to stabilize, adjust the monitor 30 minutes or more after the monitor power has been turned on.

In order to suppress the luminosity change by long-term use and to maintain the stable luminosity, use of a monitor in lower brightness is recommended.

When the screen image is changed after displaying the same image for extended periods of time, an afterimage may appear. Set up the screen saver and/or make use of the power saving function to avoid displaying the same image for extended periods of time.

Periodic cleaning is recommended to keep the monitor looking new and to prolong its operation lifetime.
(Refer to “Cleaning” on the next page.)

The LCD panel is manufactured using high-precision technology. However, missing pixels or lit pixels may appear on the LCD panel, this is not malfunction. Percentage of effective pixels : 99.99% or higher.

The backlight of the LCD panel has a fixed life span. When the screen becomes dark or begins to flicker, please contact your dealer.

Do not press on the panel or edge of the frame strongly, as this may result in the display malfunction, such as the interference patterns, etc. If pressure is continually applied to the LCD panel, it may deteriorate or damage your LCD panel. (If the pressure marks remain on the LCD panel, leave the monitor with a white or black screen. The symptom may disappear.)

Do not scratch or press on the panel with any sharp objects, such as a pencil or pen as this may result in damage to the panel. Do not attempt to brush with tissues as this may scratch the LCD panel.

When the monitor is cold and brought into a room or the room temperature goes up quickly, dew condensation may occur inside and outside the monitor. In that case, do not turn the monitor on and wait until dew condensation disappears, otherwise it may cause some damages to the monitor.

Cleaning

ATTENTION

- Never use any solvents or chemicals, such as thinner, benzene, wax, alcohol, and abrasive cleaner, which may damage the cabinet or LCD panel.
-

NOTE

- Optional ScreenCleaner is recommended for cleaning the panel surface.
-

- **LCD Panel**

- Clean the LCD panel with a soft cloth such as cotton cloth or lens cleaning paper.
- Remove persistent stains gently with a cloth dampened with a little water, and then clean the LCD panel again with a dry cloth for better finishing.


- **Cabinet**

- Clean the cabinet with a soft cloth dampened with a little mild detergent.

To use the monitor comfortably

- An excessively dark or bright screen may affect your eyes. Adjust the brightness of the monitor according to the environmental conditions.
- Staring at the monitor for a long time tires your eyes. Take a 10-minute rest every hour.

CONTENTS

| | |
|---|----|
| Cover | 1 |
|  PRECAUTIONS | 3 |
| Notice for this monitor | 6 |
| CONTENTS | 8 |
| Chapter 1 Introduction | 9 |
| 1-1. Features | 9 |
| 1-2. Package Contents | 9 |
| 1-3. Controls and Functions | 10 |
| Chapter 2 Connecting Cables | 11 |
| 2-1. Connection Procedures | 11 |
| • When used as a PC monitor | 11 |
| • When using video equipment | 12 |
| 2-2. Adjusting the Screen Angle | 13 |
| Chapter 3 Settings and Adjustments | 14 |
| 3-1. Basic Operation and Functions | 14 |
| 3-2. Color Adjustment | 16 |
| 3-3. Configure other settings | 17 |
| Chapter 4 Troubleshooting | 18 |
| Chapter 5 Reference | 19 |
| 5-1. Attaching an Arm | 19 |
| 5-2. Specifications | 20 |
| 5-3. Glossary | 24 |
| 5-4. Preset Timing | 25 |
| LIMITED WARRANTY | 26 |

Chapter 1 Introduction

Thank you very much for choosing an EIZO color LCD monitor.

1-1. Features

- 10.4-inch screen
- Resolution
 - FDX1001: XGA (1024 × 768) display compliant / FDV1001: VGA (640 × 480) display compliant
- Maximum brightness
 - FDX1001: 600 cd/m² / FDV1001: 450 cd/m²
- LED backlight LCD panel
 - The LED backlight provides better power efficiency and reduced power consumption compared to existing fluorescent backlight LCD panels.
 - No mercury, a hazardous substance, is used.
- Analog signal support
 - PC signal: D-Sub mini 15 pin connector × 1
 - FDX1001: Horizontal scanning frequency 24 kHz - 50 kHz, Vertical scanning frequency 55 Hz - 75 Hz
 - FDV1001: Horizontal scanning frequency 24 kHz - 32 kHz, Vertical scanning frequency 56 Hz - 70.5 Hz
 - Video signal: S-Video/ Video input connector × 1
 - Applicable Format NTSC, PAL, SECAM
- Crosshair display function
 - Displays lines (Fine, Circle or Broken Line) as a reference for the position of the image displayed on the monitor.
 - 3-3. Configure other settings (page 17)
- Video aspect function
 - Alters the display range of the input image (overscan).
 - 3-3. Configure other settings (page 17)

1-2. Package Contents

Check that all the following items are included in the packaging box. If any items are missing or damaged, contact your local dealer.

NOTE


- Please retain the packing materials for future transport of the monitor.

- LCD Monitor
- AC Adapter
- Cable Tie
- User's Manual (Limited Warranty included)

ATTENTION

- This product does not include a power cord. Please provide separately a power cord which meets the usage requirements.

1-3. Controls and Functions

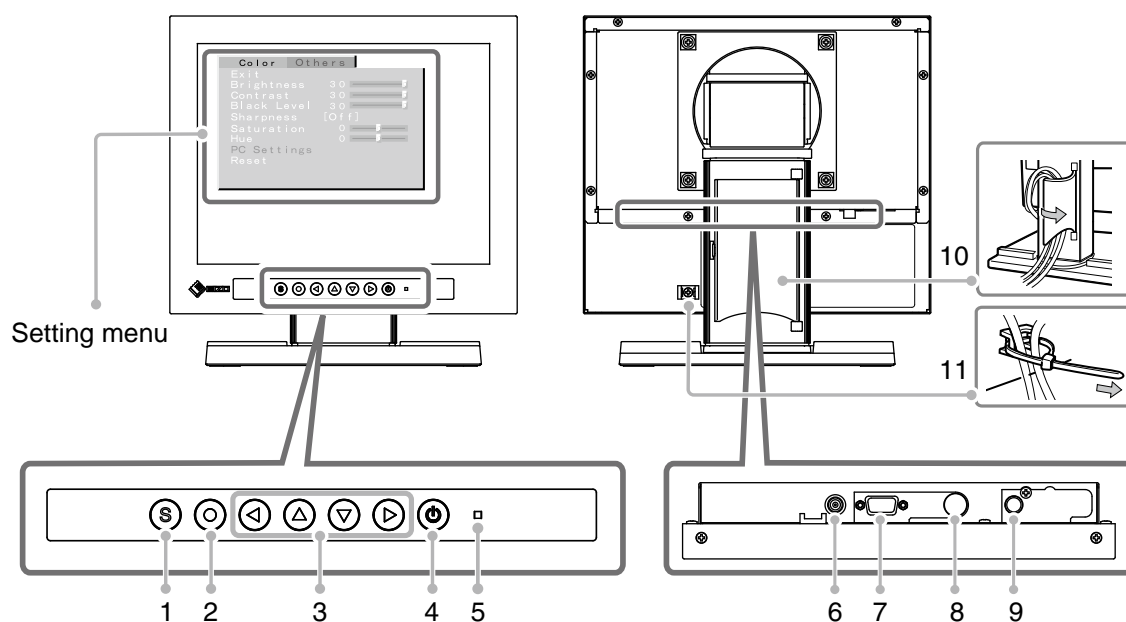

| | | |
|----|------------------------|--|
| 1 | Ⓢ button | Switches the input signal. |
| 2 | Ⓞ button | Displays the Setting menu, fixes the setting or adjustment items on each menu, and saves the setting or adjustment results. |
| 3 | ⏪⏩⏴⏵ button | <ul style="list-style-type: none"> Used to select the setting or adjustment items, or to increase or decrease the adjustment values on each menu. When the settings menu is not displayed, pressing ⏴ or ⏵ switches between displaying and not displaying the crosshair. |
| 4 | ⏻ button | Turns the power on or off. |
| 5 | Power indicator | Indicates monitor's operation status. Blue : Operating Orange : Power off |
| 6 | Power jack (DC-IN) | Connects to the AC adapter. |
| 7 | Input signal connector | D-Sub mini 15-pin connector × 1 |
| 8 | Input signal connector | S-Video input connector × 1 |
| 9 | Input signal connector | Video input connector × 1 |
| 10 | Cable holder | Covers the monitor cables. |
| 11 | Cable tie | Clinches the cable. |

Chapter 2 Connecting Cables

2-1. Connection Procedures

1 Connects to external equipment compatible with the monitor.

- When used as a PC monitor page 11
- When using video equipment page 12

• When used as a PC monitor

ATTENTION

- When replacing the current monitor with an FDX1001 / FDV1001 monitor, be sure to change the PC settings for resolution and vertical frequency to those which are available for the FDX1001 / FDV1001 monitor referring to the resolution table (see below) before connecting the PC.

Compatible Resolutions/Frequencies

The monitor supports the following resolutions.

• FDX1001

| Resolution | Display Mode | Frequency | Dot Clock |
|--------------------------|-----------------|-----------|-----------|
| 640 × 400 | NEC PC-9801 | 56 Hz | ~65 MHz |
| 640 × 400 | NEC PC-9821 | 70 Hz | |
| 640 × 480 | Apple Macintosh | 67 Hz | |
| 640 × 480 | VGA, VESA | ~75 Hz | |
| 720 × 400 | VGA TEXT | 70 Hz | |
| 800 × 600 | VESA | ~75 Hz | |
| 832 × 624 | Apple Macintosh | 75 Hz | |
| 1024 × 768 ^{*1} | VESA | 60 Hz | |


^{*1} Recommended resolution (Set this resolution.)

• FDV1001

| Resolution | Display Mode | Frequency | Dot Clock |
|------------|-----------------|-----------|-----------|
| 640 × 480 | Apple Macintosh | 67 Hz | ~31 MHz |
| 640 × 480 | VGA | 60 Hz | |


- (1) Connect the monitor to the PC with a signal cable that matches the connectors.

After connecting the cable connectors, tighten the screws of the connectors to secure the coupling.

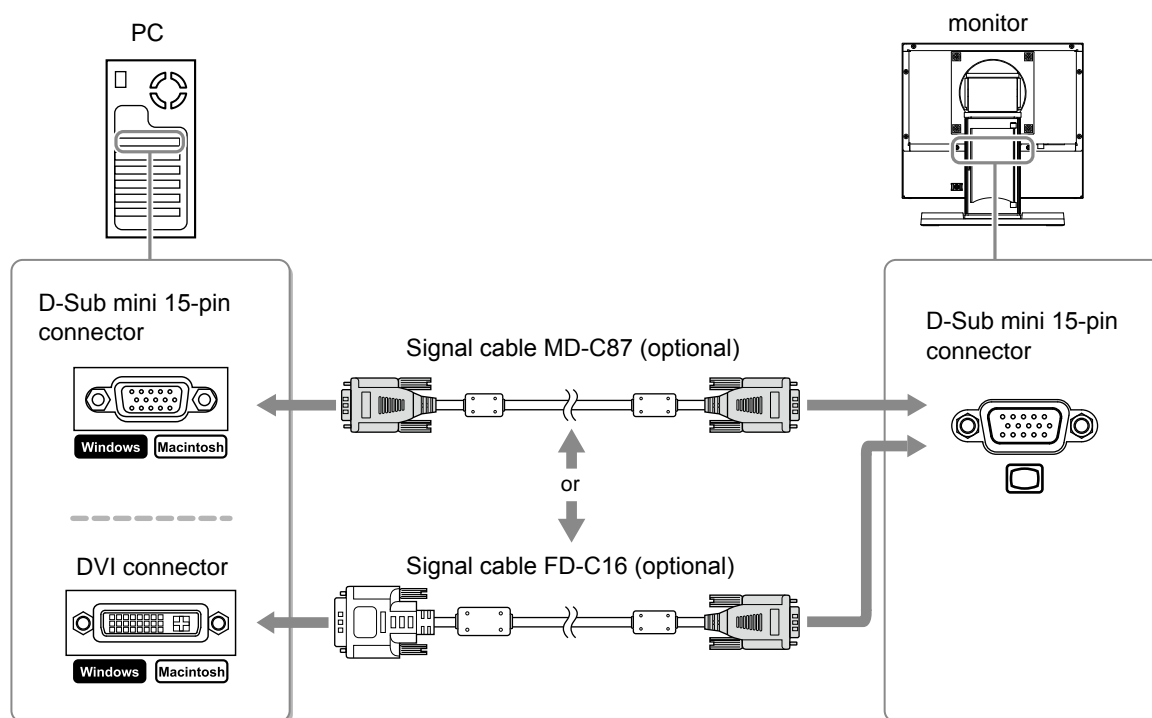

- **When using video equipment**

- (1) Connect the monitor to the video equipment with a signal cable that matches the connectors.

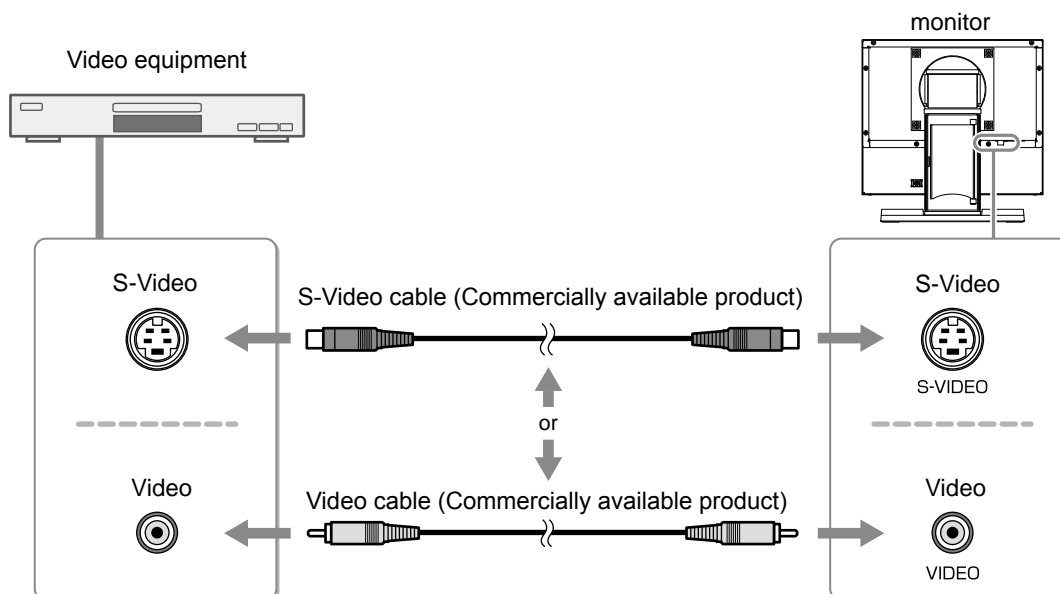

2 Plug the power cord of the monitor into a power outlet.


- (1) Connect the power cord to the AC adapter.
- (2) Connect the AC adapter to the Power jack of the monitor, and after that, connect the power plug to a power outlet.

ATTENTION

- This product does not include a power cord. Please provide separately a power cord which meets the usage requirements.
 - For the maximum power saving, it is recommended that the Power button be turned off. Unplugging the power cord completely shuts off power supply to the monitor.
-

2-2. Adjusting the Screen Angle

Hold left and right edge of the monitor with both hands, and adjust the tilt and swivel to the best condition for working.

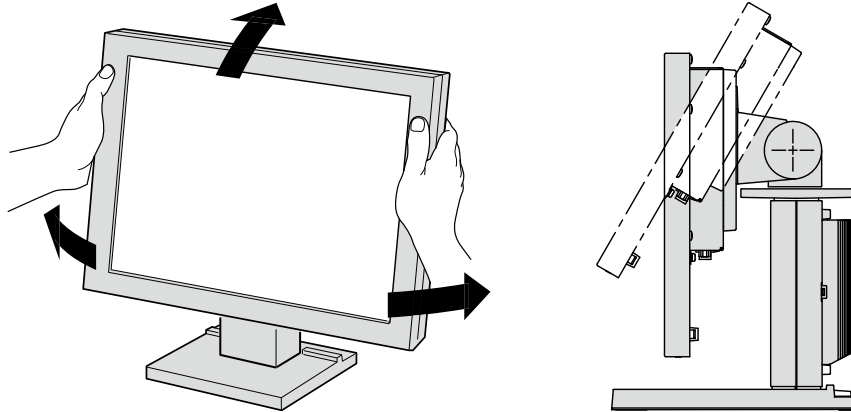


Chapter 3 Settings and Adjustments

 

3-1. Basic Operation and Functions


Basic operation of Setting menu




1 Displaying Setting Menu


Press .




2 Setting/Adjusting

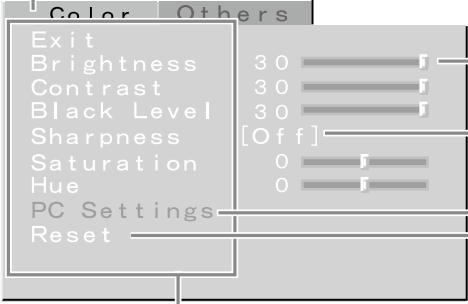
When a tab is selected (highlighted in yellow), press  or  to switch tabs.






    
Pressing  ,  or  on an item with a numerical value brings up an adjustment menu. (The Setting menu disappears when the adjustment menu is displayed.)





Adjust with  or  , and press .

 
Pressing  on an item with a setting value brings up a selection menu.




 
Select a setting value with  or  , and press .


Pressing  on [Reset] will reset all the currently displayed settings to the default configuration.


1 Press .

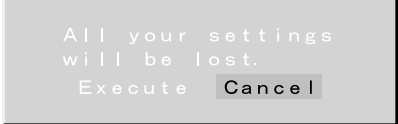


2 Select "Execute" in the confirmation dialog box, and press .

Pressing  on an item without a setting value brings up a more detailed Setting menu.

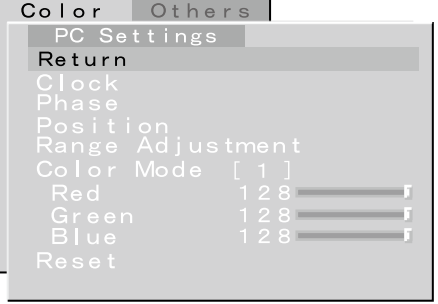

When done configuring the various items, choose [Return], and press  to return to the previous menu.

3 Exiting

Choose [Exit] with  or  , and press .

NOTE

- Keeping  pressed for 2 seconds will also exit the Setting menu.

Functions

The settings adjustable in the Setting menu are as shown below. The availability of items depends on the input signal.

√ : Configurable — : Not configurable

| Tab | Setting / adjustable item | | PC | Video | Reference |
|--------|---------------------------|------------------|----|-------|-----------|
| Color | Brightness | | √ | √ | page 16 |
| | Contrast | | √ | √ | |
| | Black Level | | √ | √ | |
| | Sharpness | | — | √ | |
| | Saturation | | — | √ | |
| | Hue | | — | √ | |
| | PC Settings | Clock | √ | — | |
| | | Phase | √ | — | |
| | | Position | √ | — | |
| | | Range Adjustment | √ | — | |
| | | Color Mode | √ | — | |
| | | Red/Green/Blue | √ | — | |
| | | Reset | √ | — | |
| | Reset | | √ | √ | |
| Others | Video Aspect | | — | √ | page 17 |
| | Power Save | | √ | √ | |
| | Reverse | | √ | √ | |
| | Crosshair | | √ | √ | |
| | | Color | √ | √ | |
| | | Width | √ | √ | |
| | Beep | | √ | √ | |
| | Language | | √ | √ | |
| | Information | | √ | √ | |

3-2. Color Adjustment

This will perform color adjustments.

Please switch between the input screens you want to adjust and adjust them one by one.




| Adjustable item / adjustable value | | | Adjusting |
|------------------------------------|--------------------------|----------------|--|
| Brightness | 0 - 30 | | Adjusts the brightness of the backlight. |
| Contrast | 0 - 30 | | Adjusts the contrast. |
| Black Level | 0 - 30 | | Adjusts the image brightness. |
| Sharpness | Off/Low/High | | Adjusts the image outlines. |
| Saturation | -30 - +30 | | Adjusts the saturation. |
| Hue | -30 - +30 | | Adjusts the hue. |
| PC Settings* ¹ | Clock | | Adjust this when vertical bars appear. |
| | Phase | | Adjust this when the screen appears to flicker or blur. |
| | Position | | Adjust this when the display positioning is misaligned. |
| | Range Adjustment | | Provides automatic adjustment when you want every color gradients displayed. |
| | Color Mode* ² | | Select Color Mode (1/2/3) to adjust the colors of red, green and blue in several modes. |
| | | 1/2/3 | |
| | | Red/Green/Blue | 0 - 128 |
| Reset | | | Resets the state adjusted with [PC Settings] to the factory default. |
| Reset | | | Resets the state adjusted with the [Color] tab to the factory default (excluding [PC Settings]). |

^{*1} This setting becomes available when a PC is connected to the monitor. Please adjust with a PC when display and color adjustments are required.

^{*2} Perform [Range Adjustment] before adjusting Color Mode.

3-3. Configure other settings

   
This will configure other settings.

| Setting item / setting value | | Setting |
|------------------------------|---|---|
| Video Aspect | Nomal/100% | <p>Configures the display range of the input image (overscan).</p> <p>“Normal” : Displays the input image with the outmost parts slightly cut off. * This is how display devices normally display images.</p>  <p>“100 %” : Displays the entire input image on the screen. * Because a part of the image which normally gets cut off is displayed as well, noise may be visible around the outmost parts, depending on the input signal.</p>  |
| Power Save | Disable/Enable | Automatically turns off the power supply if no video signal has been received for 15 minutes during PC or video viewing. |
| Reverse | Off/On | Displays the image upside down (180 degree rotation). |
| Crosshair | Off/Fine/Circle/Broken Line | <p>Displays a crosshair as a reference for the position of the image.</p> <p>“Fine” “Circle” “Broken Line”</p>  <p>(When the settings menu is not displayed, pressing Δ or ∇ switches between displaying and not displaying the crosshair.)</p> |
| Color | When “Fine” is selected: Black/White/Red/Green When “Circle” or “Broken Line” is selected: Black/White | Configures the color of the crosshair. |
| | Width | Narrow/Wide |
| Beep | Off/On | <p>Sets button press sounds and connection error sounds to on or off.</p> <ul style="list-style-type: none"> Short beep : - When \odot, $\\$ or \textcircled{S} is pressed. - When an item is selected with \odot. - When a maximum or minimum value is set with \triangleleft or \triangleright. Long beep : When registration is performed with \odot. 2 short beeps : When the Setting menu is displayed and \odot is pressed. 4 short beeps : - When there is no input signal. - When a frequency out of the specified range is received. |
| Language | 日本語 /English | Configures the displayed Setting menu and message language. |
| Information | | Reviews the input signals, usage time and model name. |



Chapter 4 Troubleshooting

If a problem still remains after applying the suggested remedies, contact your local dealer.

Common

| Problems | Possible cause and remedy |
|---|---|
| No picture <ul style="list-style-type: none"> Power indicator does not light. | <ul style="list-style-type: none"> Check whether the power cord is connected correctly. If the problem persists, turn off the power, and then turn it on again a few minutes later. |
| <ul style="list-style-type: none"> Power indicator lights orange. | <ul style="list-style-type: none"> Press . |
| <ul style="list-style-type: none"> Power indicator lights blue. | <ul style="list-style-type: none"> Check whether the power of the connected device is turned on. Switch the input signal. Set each adjusting value in [Brightness] and [Contrast] to higher level. (see page 16) |
| <ul style="list-style-type: none"> The screen is too bright or too dark. | <ul style="list-style-type: none"> Adjust using [Brightness] or [Contrast]. (The LCD monitor backlight has a fixed life span. When the screen becomes dark or begins to flicker, contact your local dealer.) (see page 16) |
| Green/red/blue/white dots or defective dots remain on the screen. | <ul style="list-style-type: none"> This is due to LCD panel characteristics and is not a failure. |
| Interference patterns or pressure marks remain on the screen. | <ul style="list-style-type: none"> Leave the monitor with a white or black screen. The symptom may disappear. |
| Afterimages appear. | <ul style="list-style-type: none"> Afterimages are particular to LCD monitors. Avoid displaying the same image for a long time. When displaying the same image for extended periods of time, please set up the screen saver and/or make use of the power saving function. |

When displaying on a PC screen

| Problems | Possible cause and remedy |
|--|--|
| The message below appears. | <ul style="list-style-type: none"> This message appears when the signal is not input correctly even when the monitor functions properly. |
| <ul style="list-style-type: none"> This message appears when no signal is input.  | <ul style="list-style-type: none"> The message shown left may appear, because some PCs do not output the signal soon after power-on. Check whether the PC is turned on. Check whether the signal cable is connected properly. |
| <ul style="list-style-type: none"> The message shows that the input signal is out of the specified frequency range.  | <ul style="list-style-type: none"> Check whether the signal setting of your PC matches the resolution and the vertical frequency settings for the monitor. (see page 20, 21) (Current input signal can be checked in [Information].) Reboot the PC. Select an appropriate display mode using the graphics board's utility. Refer to the manual of the graphics board for details. |
| Display position is incorrect. | <ul style="list-style-type: none"> Adjust image position using [Position]. (see page 16) |
| Vertical bars appear on the screen or a part of the image is flickering. | <ul style="list-style-type: none"> Adjust using [Clock]. (see page 16) |
| Whole screen is flickering or blurring. | <ul style="list-style-type: none"> Adjust using [Phase]. (see page 16) |
| Characters are blurred. | <ul style="list-style-type: none"> This may occur when a non-complying high-resolution signal is input. Check the PC settings and change the resolution which complies with the monitor. |

Chapter 5 Reference

5-1. Attaching an Arm

The stand can be removed and replaced with an arm (or another stand) to be attached to the monitor. Use an arm or stand of EIZO option.

ATTENTION

- When attaching an arm or stand, follow the instructions of their user's manual.
- When using another manufacturer's arm or stand, confirm the following in advance and select one conforming to the VESA standard. Use the M4 × 12 mm screws in use by this monitor.
 - Clearance between the screw holes : 100 mm × 100 mm
 - Thickness of plate : 2.6 mm
 - Strong enough to support weight of the monitor unit (except the stand) and attachments such as cables.
 Use the screws as described below.
- Connect the cables after attaching an arm or a stand.
- Since the monitor and arm are so heavy, dropping them may result in injury or equipment damage.
- Do not turn the monitor lengthwise.

[Attachment Procedure]


1 Lay the LCD monitor on a soft cloth spread over on a stable surface with the panel surface facing down.

2 Remove the stand.

Prepare a screwdriver. Unscrew the four screws securing the unit and the stand with the screwdriver.

3 Attach the monitor to the arm or stand.

Secure the monitor to the arm or stand using the screws specified in the user's manual of the arm or stand.

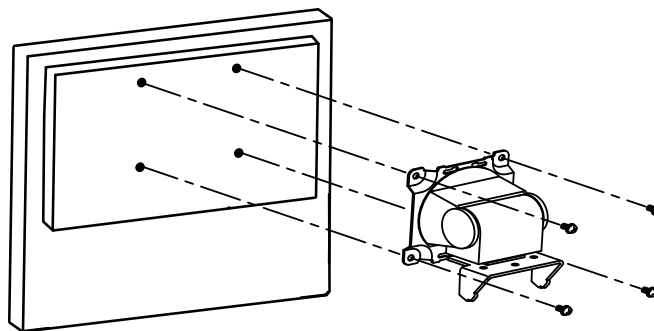

5-2. Specifications

FDX1001

| | | |
|--|---------------------------|--|
| LCD Panel | Size | 10.4-inch (260 mm) TFT color LCD |
| | Surface treatment | Anti-glare hard coating |
| | Surface hardness | 3H |
| | Viewing angle | Horizontal 160°, Vertical 130° (CR : 10 or more) |
| | Dot Pitch | 0.2055 mm |
| Display Area (H × V) | | 210.4 mm × 157.8 mm |
| Resolution | | 1024 dots × 768 lines |
| Max. Display Color | | Approx. 16.7 million colors |
| PC input | Horizontal Scan Frequency | 24-50 kHz |
| | Vertical Scan Frequency | 55-75 Hz (Non-interlace) |
| | Max. Dot Clock | 65 MHz |
| | Input Signal Connector | D-Sub mini 15-pin × 1 |
| | Input Signal (Sync) | Separate, TTL, positive / negative |
| | Input Signal (Video) | Analog, Positive (0.7Vp-p/75Ω) |
| | Max. Video Signal Memory | 15 (preset : 13) |
| | Plug and Play | VESA DDC 2B/EDID structure 1.3 |
| Video input | Applicable Format | NTSC, PAL, SECAM |
| | Input Signal Connector | DIN mini 4 pin/ Pin jack × 1 |
| | Input Signal Level | DIN mini 4 pin : Y 1.0Vp-p/75Ω, C 0.28Vp-p/75Ω Pin jack : 1.0Vp-p/75Ω |
| Power Supply | | AC adapter (AC) : 100-240VAC±10%, 50/60Hz, 0.3-0.2 A (Max.) Main unit (DC) : 12VDC±10%, 0.9 A |
| Power Consumption | Screen Display On | AC adapter (AC) : 13 W or less Main unit (DC) : 11 W or less |
| | Power Off | AC adapter (AC) : 1.3 W or less Main unit (DC) : 0.5 W or less |
| Dimensions (Width) × (Height) × (Depth) | Main unit | 252 mm (9.9 inch) × 255 mm (10 inch) × 175 mm (6.9 inch) |
| | Main unit (without stand) | 252 mm (9.9 inch) × 216 mm (8.5 inch) × 43 mm (1.69 inch) |
| Mass | Main unit | Approx. 3.6 kg (7.9 lbs.) |
| | Main unit (without stand) | Approx. 2.0 kg (4.4 lbs.) |
| Movable range | Tilt | 30°Up, 0°Down |
| | Swivel | 35°Right, 35°Left |
| Environmental Conditions | Temperature | Operating temperature : 0 °C - 40 °C (32 °F - 104 °F) Storage temperature : -20 °C - 60 °C (-4 °F - 140 °F) |
| | Humidity | Operating humidity : 20% - 80% R.H. (no condensation) Storage humidity : 10% - 80% R.H. (no condensation) |
| | Pressure | Operating : 700 hPa - 1060 hPa Storage : 200 hPa - 1060 hPa |

| | | |
|--|---------------------------|--|
| LCD Panel | Size | 10.4-inch (260 mm) TFT color LCD |
| | Surface treatment | Anti-glare hard coating |
| | Surface hardness | 3H |
| | Viewing angle | Horizontal 160°, Vertical 140° (CR : 10 or more) |
| | Dot Pitch | 0.33 mm |
| Display Area (H × V) | | 211.2 mm × 158.4 mm |
| Resolution | | 640 dots × 480 lines |
| Max. Display Color | | Approx. 16.2 million colors |
| PC input | Horizontal Scan Frequency | 24-32 kHz |
| | Vertical Scan Frequency | 56-70.5 Hz (Non-interlace) |
| | Max. Dot Clock | 31 MHz |
| | Input Signal Connector | D-Sub mini 15-pin × 1 |
| | Input Signal (Sync) | Separate, TTL, positive / negative |
| | Input Signal (Video) | Analog, Positive (0.7Vp-p/75Ω) |
| | Max. Video Signal Memory | 10 (preset : 8) |
| | Plug and Play | VESA DDC 2B/EDID structure 1.3 |
| Video input | Applicable Format | NTSC, PAL, SECAM |
| | Input Signal Connector | DIN mini 4 pin/ Pin jack × 1 |
| | Input Signal Level | DIN mini 4 pin : Y 1.0Vp-p/75Ω, C 0.28Vp-p/75Ω Pin jack : 1.0Vp-p/75Ω |
| Power Supply | | AC adapter (AC) : 100-240VAC±10%, 50/60Hz, 0.2-0.15 A (Max.) Main unit (DC) : 12VDC±10%, 0.7 A |
| Power Consumption | Screen Display On | AC adapter (AC) : 10 W or less Main unit (DC) : 9 W or less |
| | Power Off | AC adapter (AC) : 1.3 W or less Main unit (DC) : 0.5 W or less |
| Dimensions (Width) × (Height) × (Depth) | Main unit | 252 mm (9.9 inch) × 255 mm (10 inch) × 175 mm (6.9 inch) |
| | Main unit (without stand) | 252 mm (9.9 inch) × 216 mm (8.5 inch) × 43 mm (1.69 inch) |
| Mass | Main unit | Approx. 3.4 kg (7.5 lbs.) |
| | Main unit (without stand) | Approx. 1.8 kg (4.0 lbs.) |
| Movable range | Tilt | 30°Up, 0°Down |
| | Swivel | 35°Right, 35°Left |
| Environmental Conditions | Temperature | Operating temperature : 0 °C - 40 °C (32 °F - 104 °F) Storage temperature : -20 °C - 60 °C (-4 °F - 140 °F) |
| | Humidity | Operating humidity : 20% - 80% R.H. (no condensation) Storage humidity : 10% - 80% R.H. (no condensation) |
| | Pressure | Operating : 700 hPa - 1060 hPa Storage : 200 hPa - 1060 hPa |


Main default settings (factory settings)


| | PC | Video |
|--------------|---------|-------|
| Brightness | 30 | |
| Contrast | 30 | 15 |
| Black Level | 30 | 15 |
| Sharpness | Off | |
| Saturation | - | 0 |
| Hue | - | 0 |
| Color Mode | 1 | - |
| Video Aspect | Normal | |
| Power Save | Enable | |
| Reverse | Off | |
| Crosshair | Off | |
| Beep | On | |
| Language | English | |

Outside Dimensions


unit : mm (inch)

FDX1001

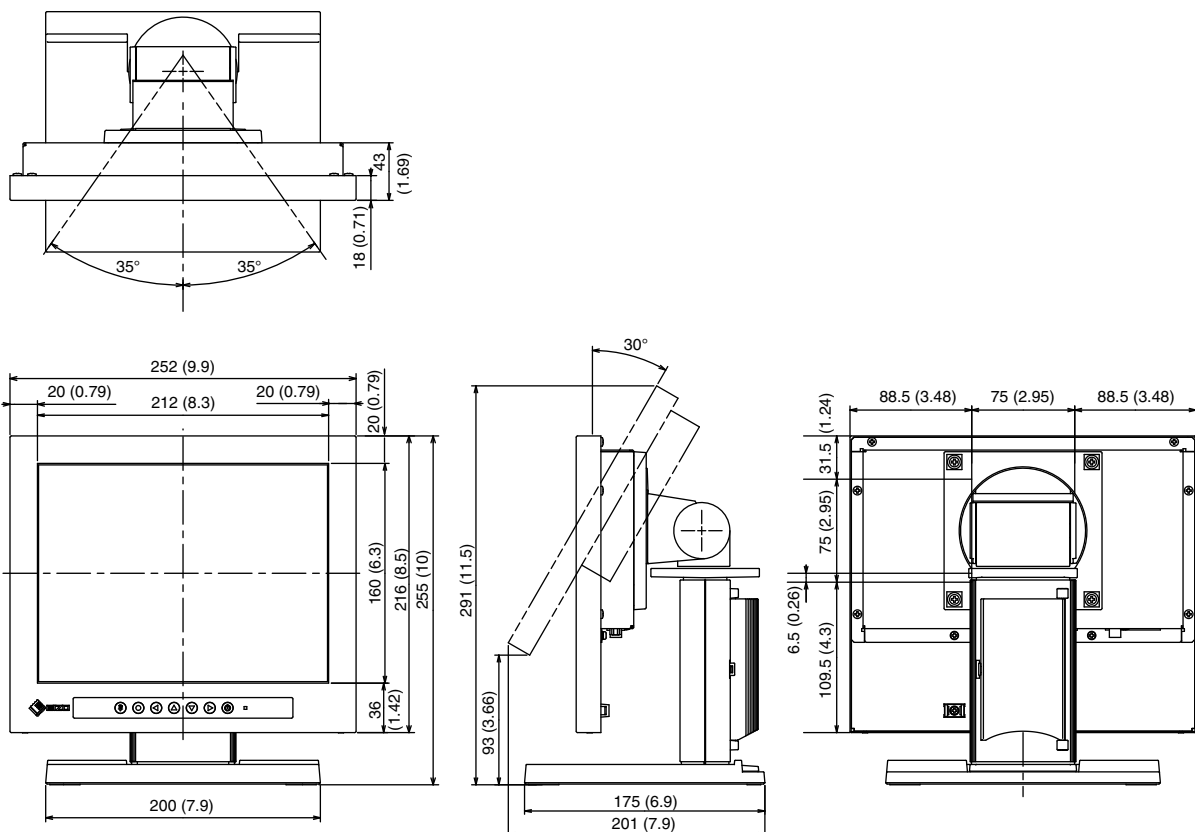

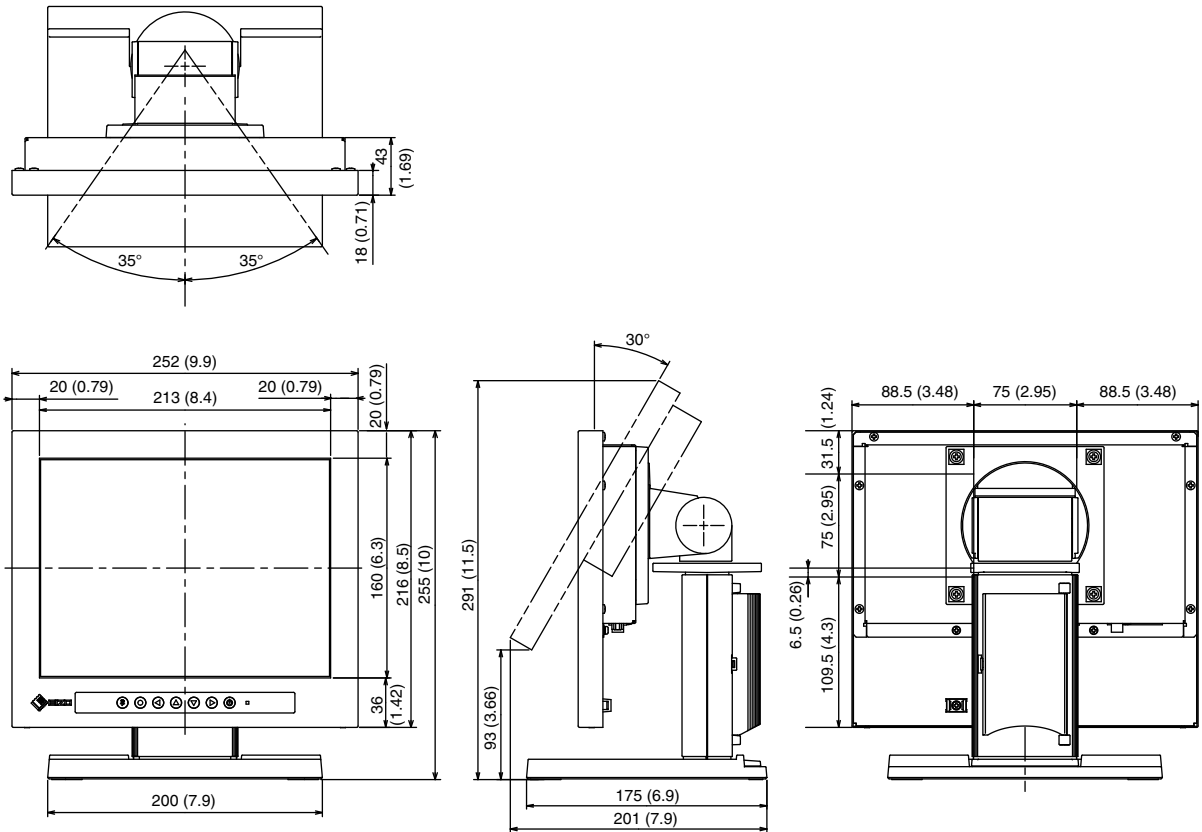FDV1001**Connector Pin Assignment**

 - D-Sub mini 15-pin connector



| Pin No. | Signal | Pin No. | Signal | Pin No. | Signal |
|---------|-------------|---------|--------------------|---------|-------------|
| 1 | Red video | 6 | Red video ground | 11 | NC* |
| 2 | Green video | 7 | Green video ground | 12 | Data (SDA) |
| 3 | Blue video | 8 | Blue video ground | 13 | H. Sync |
| 4 | NC* | 9 | NC* | 14 | V. Sync |
| 5 | Ground | 10 | Ground | 15 | Clock (SCL) |

(NC*: No Connection)

5-3. Glossary

Afterimage

The Afterimage is particular to LCD monitors. When the monitor screen is left on for a long period without use. The Afterimage can be removed gradually by changing the displayed image.

Clock

The analog input monitor needs to reproduce a clock of the same frequency as the dot clock of the graphics system in use, when the analog input signal is converted to a digital signal for image display. This is called clock adjustment. If the clock pulse is not set correctly, some vertical bars appear on the screen.

Phase

Phase means the sampling timing to convert the analog input signal to a digital signal. Phase adjustment is made to adjust the timing. It is recommended that phase adjustment be made after the clock is adjusted correctly.

Range Adjustment

Range adjustment controls the signal output levels to display every color gradation. It is recommended that range adjustment be made before color adjustment.

Resolution

The LCD panel consists of numerous pixels of specified size, which are illuminated to form images. This monitor consists of 1024 (FDX1001) / 640 (FDV1001) horizontal pixels and 768 (FDX1001) / 480 (FDV1001) vertical pixels.

At a resolution of 1024×768 (FDX1001) / 640×480 (FDV1001), all pixels are illuminated as a full screen (1:1).

5-4. Preset Timing

The following table shows the factory preset video timing of the PC.

ATTENTION

- Display position may be deviated depending on the PC connected, which may require screen adjustment using Setting menu.
- If a signal other than those listed in the table is input, adjust the screen using the Setting menu. However, screen display may still be incorrect even after the adjustment.
- When interlace signals are used, the screen cannot be displayed correctly even after screen adjustment using the Setting menu.

FDX1001

| Resolution | Applicable signal | Frequency | | | Polarity | |
|------------|-------------------|-----------------|------------------|---------------|------------|----------|
| | | Dot clock : MHz | Horizontal : kHz | Vertical : Hz | Horizontal | Vertical |
| 720 × 400 | VGA TEXT | 28.33 | 31.47 | 70.09 | Negative | Positive |
| 640 × 480 | VGA | 25.18 | 31.47 | 59.94 | Negative | Negative |
| 640 × 480 | VESA | 31.5 | 37.86 | 72.81 | Negative | Negative |
| 640 × 480 | VESA | 31.5 | 37.50 | 75.00 | Negative | Negative |
| 800 × 600 | VESA | 36.00 | 35.16 | 56.25 | Positive | Positive |
| 800 × 600 | VESA | 40.00 | 37.88 | 60.32 | Positive | Positive |
| 800 × 600 | VESA | 50.00 | 48.08 | 72.19 | Positive | Positive |
| 800 × 600 | VESA | 49.50 | 46.88 | 75.00 | Positive | Positive |
| 1024 × 768 | VESA | 65.00 | 48.36 | 60.00 | Negative | Negative |
| 640 × 480 | MAC | 30.24 | 35.00 | 66.67 | Negative | Negative |
| 832 × 624 | MAC | 57.28 | 49.72 | 74.55 | Negative | Negative |
| 640 × 400 | PC-9801 | 21.05 | 24.83 | 56.42 | Negative | Negative |
| 640 × 400 | PC-9821 AP2 | 25.18 | 31.48 | 70.10 | Negative | Negative |

FDV1001

| Resolution | Applicable signal | Frequency | | | Polarity | |
|------------|-------------------|-----------------|------------------|---------------|------------|----------|
| | | Dot clock : MHz | Horizontal : kHz | Vertical : Hz | Horizontal | Vertical |
| 720 × 400 | VGA TEXT | 28.33 | 31.47 | 70.09 | Negative | Positive |
| 640 × 480 | VGA | 25.18 | 31.47 | 59.94 | Negative | Negative |
| 800 × 600 | VESA | 36.00 | 35.16 | 56.25 | Positive | Positive |
| 800 × 600 | VESA | 40.00 | 37.88 | 60.32 | Positive | Positive |
| 1024 × 768 | VESA | 65.00 | 48.36 | 60.00 | Negative | Negative |
| 640 × 480 | MAC | 30.24 | 35.00 | 66.67 | Negative | Negative |
| 640 × 400 | PC-9801 | 21.05 | 24.83 | 56.42 | Negative | Negative |
| 640 × 400 | PC-9821 AP2 | 25.18 | 31.48 | 70.10 | Negative | Negative |

LIMITED WARRANTY

EIZO NANA CORPORATION (hereinafter referred to as “EIZO”) and distributors authorized by EIZO (hereinafter referred to as the “Distributors”) warrant, subject to and in accordance with the terms of this limited warranty (hereinafter referred to as the “Warranty”), to the original purchaser (hereinafter referred to as the “Original Purchaser”) who purchased the product specified in this document (hereinafter referred to as the “Product”) from EIZO or Distributors, that EIZO and Distributors shall, at their sole discretion, either repair or replace the Product at no charge if the Original Purchaser becomes aware within the Warranty Period (defined below) that the Product malfunctions or is damaged in the course of normal use of the Product in accordance with the description in the instruction manual attached to the Product (hereinafter referred to as the “User’s Manual”).

The period of this Warranty is two (2) years from the date of purchase of the Product (hereinafter referred to as the “Warranty Period”). EIZO and Distributors shall bear no liability or obligation with regard to the Product in relation to the Original Purchaser or any third parties other than as provided under this Warranty.

EIZO and Distributors will cease to hold or store any parts of the Product upon expiration of seven (7) years after the production of such parts is discontinued. In repairing the monitor, EIZO and Distributors will use renewal parts which comply with our QC standards.

The Warranty is valid only in the countries or territories where the Distributors are located. The Warranty does not restrict any legal rights of the Original Purchaser.

Notwithstanding any other provision of this Warranty, EIZO and Distributors shall have no obligation under this Warranty whatsoever in any of the cases as set forth below:

- (a) Any defect of the Product caused by freight damage, modification, alteration, abuse, misuse, accident, incorrect installation, disaster, faulty maintenance and/or improper repair by third party other than EIZO and Distributors;
- (b) Any incompatibility of the Product due to possible technical innovations and/or regulations;
- (c) Any deterioration of display performance caused by the deterioration of expendable parts such as the LCD panel and/or backlight, etc. (e.g. changes in brightness, changes in brightness uniformity, changes in color, changes in color uniformity, defects in pixels including burnt pixels, etc.);
- (d) Any defect of the Product caused by external equipment;
- (e) Any defect of the Product on which the original serial number has been altered or removed;
- (f) Any defect of the Product caused by liquid leaking from battery;
- (g) Any normal deterioration of the product, particularly that of consumables, accessories, and/or attachments (e.g. batteries, buttons, rotating parts, remote control, cables, User’s Manual, etc.); and
- (h) Any deformation, discoloration, and/or warp of the exterior of the product including that of the surface of the LCD panel.

To obtain service under the Warranty, the Original Purchaser must deliver the Product, freight prepaid, in its original package or other adequate package affording an equal degree of protection, assuming the risk of damage and/or loss in transit, to the local Distributor. The Original Purchaser must present proof of purchase of the Product and the date of such purchase when requesting services under the Warranty.

The Warranty Period for any replaced and/or repaired product under this Warranty shall expire at the end of the original Warranty Period.

EIZO OR DISTRIBUTORS ARE NOT RESPONSIBLE FOR ANY DAMAGE TO, OR LOSS OF, DATA OR OTHER INFORMATION STORED IN ANY MEDIA OR ANY PART OF ANY PRODUCT RETURNED TO EIZO OR DISTRIBUTORS FOR REPAIR.

EIZO AND DISTRIBUTORS MAKE NO FURTHER WARRANTIES, EXPRESSED OR IMPLIED, WITH RESPECT TO THE PRODUCT AND ITS QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR USE. IN NO EVENT SHALL EIZO OR DISTRIBUTORS BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, CONSEQUENTIAL OR OTHER DAMAGE WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFIT, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT OR IN ANY CONNECTION WITH THE PRODUCT, WHETHER BASED ON CONTRACT, TORT, NEGLIGENCE, STRICT LIABILITY OR OTHERWISE, EVEN IF EIZO OR DISTRIBUTORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THIS EXCLUSION ALSO INCLUDES ANY LIABILITY WHICH MAY ARISE OUT OF THIRD PARTY CLAIMS AGAINST THE ORIGINAL PURCHASER. THE ESSENCE OF THIS PROVISION IS TO LIMIT THE POTENTIAL LIABILITY OF EIZO AND DISTRIBUTORS ARISING OUT OF THIS LIMITED WARRANTY AND/OR SALES.

关于电子信息产品污染控制标识



本标识根据「电子信息产品污染控制管理办法」,适用于在中华人民共和国销售的电子信息产品。标识中央的数字为环保使用期限的年数。只要您遵守该产品相关的安全及使用注意事项,在自制造日起算的年限内,不会产生对环境污染或人体及财产的影响。上述标识粘贴在机器背面。

•有毒有害物质或元素的名称及含量

| 部件名称 | 有毒有害物质或元素 | | | | | |
|-------|-----------|-----------|-----------|------------------|---------------|-----------------|
| | 铅 (Pb) | 汞 (Hg) | 镉 (Cd) | 六价铬 (Cr (VI)) | 多溴联苯 (PBB) | 多溴二苯醚 (PBDE) |
| 印刷电路板 | × | ○ | ○ | ○ | ○ | ○ |
| 机箱 | ○ | ○ | ○ | ○ | ○ | ○ |
| 液晶显示器 | × | ○ | ○ | ○ | ○ | ○ |
| 其他 | × | ○ | ○ | ○ | ○ | ○ |

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 规定的限量要求以下。
 ×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 规定的限量要求。
 （企业可在此处，根据实际情况对上表中打“×”的技术原因进行进一步说明）



EIZO NANAO CORPORATION

153 Shimokashiwano, Hakusan, Ishikawa 924-8566 Japan
Phone: +81 76 277 6792 Fax: +81 76 277 6793

EIZO EUROPE AB

Lovangsvagen 14 194 61, Upplands Väsby, Sweden
Phone: +46 8 594 105 00 Fax: +46 8 590 91 575

This document is printed on recycled chlorine free paper.

<http://www.eizo.com>

2nd Edition-February, 2010 Printed in Japan.

00NOL562B1
(U.M-FDX1001-AL)